

TROPITONE®



MORE INFORMATION

For care and cleaning instructions, refer to the Tropitone® Care, Maintenance, Safety & Warranty Information guide included with your furniture and available at www.tropitone.com/warranty.

Additional care information, “How To” videos and assembly instructions for Tropitone Outdoor Furniture and Basta Sole shade products are also available at our website.

If you have difficulty understanding any of the instructions and need assistance while assembling your Kenzo Components, please call Tropitone’s Customer Service Center at 949-951-2010.



Tropitone Furniture Co., Inc.
5 Marconi, Irvine, CA 92618

949 951 2010 phone
www.tropitone.com

Part # R9T00034
Revised: 02-07.2023
2023 Tropitone Furniture Co., Inc.

TROPITONE®

*Assembled furniture
is heavy. Assemble
at place of use.*

Kenzo Modular Assembly Instructions

Congratulations on the purchase of your Tropitone® Kenzo Modular Components. Read through all steps before fastening components together.

CAUTION: Do not try to lift or flip furniture components with only one person. Components may be heavy and awkward to handle, and may result in injury to persons or damage to property if not lifted properly.

Tools Required

7/16” Combination Wrench
Safety Glasses

Cordless Drill
#2 Phillips Head Drill Bit

Parts List per Sectional Unit

- | | |
|-------------------------------------|-------------------------------------|
| (1) Modular Component | (1) Connecting Bracket
(2 holes) |
| (2) Connecting Brackets
(1 slot) | (2) ¼ x ¾” Self Tapping
Screw |
| (4) ¼ x 7/8” Hex Head Bolts | |
| (4) ¼” Lock Washers | |

✓ Check that all items listed in the Parts List are in your carton.


Step 1

Modular Components can be assembled in upright position. By reaching under furniture with cushions removed, the lower attachment locations may be accessed.

Step 2

Align Modular Components to be ready for assembly.

At the front and rear of the Modular Components that are being joined together, attach a connecting Bracket to join the items using (2) $\frac{1}{4}$ x $\frac{7}{8}$ " Hex Head Bolts fitted with (1) $\frac{1}{4}$ " Lock Washer each through the slot in the brackets into the threaded holes at the front and back of the components. Threaded holes are located below the cushion under sling near the front of the furniture components. Tighten bolts hand tight in both locations.

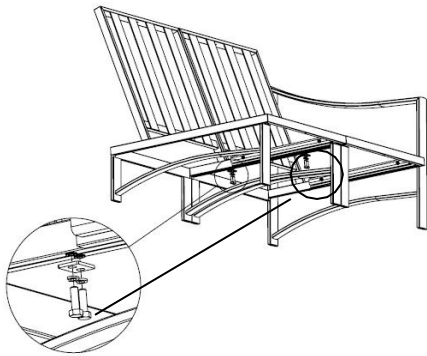

Fully Tighten bolts in both locations using a $\frac{7}{16}$ " combination wrench.

Step 3

Locate the side brace for each of the Modular Components that are being joined together, ensuring that they are aligned.

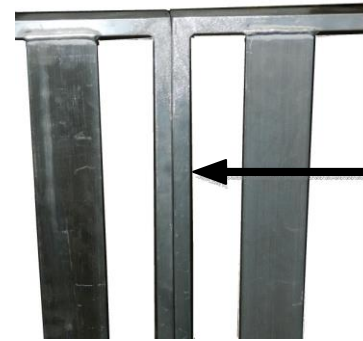


Diagram 1



Diagram 2

Measure 6" down from the top of the side braces. (See Diagram 1)

Center and hold the Connecting Bracket at the 6" mark. Using the Cordless Drill, drill the (2) $\frac{1}{4}$ x $\frac{3}{4}$ " Self Tapping Screws through the Bracket and into the side braces. (See Diagram 2)

Step 4

Repeat Step 2 and Step 3 for each additional Modular Component until all items are fastened together into the desired configuration.

Step 5

Place the seat cushions onto each Modular Component with Velcro down and the zippers down and to the rear.

Place the back cushions onto each Modular Component with Velcro attachment straps facing rear. Wrap the two attachment straps around cross member bracing on furniture component back and engage Velcro.